

Receiving Instructions

Inspect the cooler box for any evidence of shipping or handling damage. All shipping damage claims should be filed promptly with the carrier. Ensure cooler stands upright for 24 hours prior to use.

Operating Instructions

1. Place the water cooler a minimum of 2 inches/ 5cm from the wall to ensure adequate ventilation.
2. Place the water bottle on top of the cooler appropriately. (For open reservoir models remove the cap from the bottle first.)

Note: On H&C models, vent the hot tank by holding the red faucet open until water flows out. Heater switch may now be turned on.

3. Ensure that available power supply matches the cooler voltage specifications indicated on the nameplate label (located at rear). Plug power supply cord into receptacle, ensuring that access to power outlet and plug is unobstructed. Use of an extension cord will void the warranty.
4. Do not draw water from the cooler for 30 minutes to allow water to cool and heat (on Hot & Cold models). Optimum water temperatures will be reached after several hours of operation.
5. Ensure the following when cooler is to be serviced:
 - 5.1. Disconnect power supply cord and turn off Hot Tank Switch (Hot & Cold models only).
 - 5.2. Remove bottle from reservoir.
 - 5.3. Use a container to drain water from the cold water reservoir through faucets. Allow 2 hours for the hot water to cool down inside the hot water tank. Remove the drain plug at the rear of the cooler to drain into a container.

CAUTION: ALWAYS DRAIN WATER COMPLETELY BEFORE SHIPPING OR STORING THE COOLER.