




SmartFlo™ Plus
Water Cartridge Replacement
For Storm Series

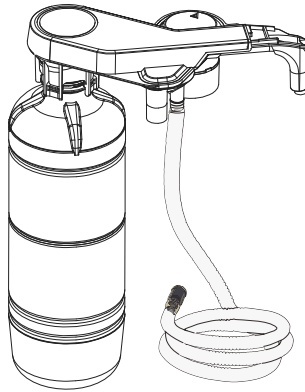

Replacement of SmartFlo™ Plus Water Cartridge

For the best quality and tasting water, it is recommended to change the SmartFlo™ Plus Water Cartridge every 6 months. Follow the steps below to replace the SmartFlo™ Plus Water Cartridge. Recommend to empty the bottle installed in the cooler prior to replacement of the SmartFlo™ Plus Water Cartridge and Bottle Adaptor.

Note: Turn Hot tank power switch to the OFF position, switch located behind and at top of bottle access door (Figure 1). **DO NOT disconnect unit power cord from the wall plug during this replacement process.**

1. Open Dispenser Door (Figure 1). (Slide door upwards to allow access to bottle area)
2. Slide empty bottle out of cabinet (Figure 2)
3. Open the replacement SmartFlo™ Plus Water Cartridge kit and take red plug from kit. Disconnect the water line from the bottle adaptor (Figure 3) and add red plug to waterline (Figure 4)

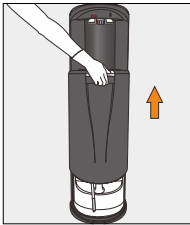


Figure 1

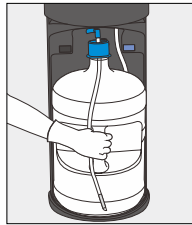


Figure 2

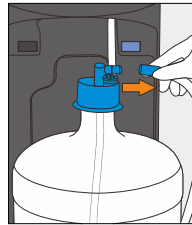


Figure 3

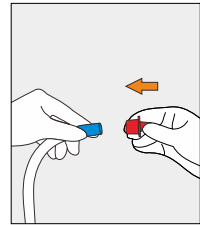


Figure 4

4. Open the replacement SmartFlo™ Plus Water Cartridge kit, and remove the **access key** provided
5. Insert the **access key** into the 2 holes located at the underside of the top edge of the cooler (above water levers) and push inwards (Figure 5 and Figure 6)(once unlocked, the front of the top cover opens upwards)
6. Place a glass or other container below the water outlets (to catch drips), and unlatch the locking clip located near the front of the cooler to release the water tubing (Figure 7)
7. Unlock the turn knobs which hold down the SmartFlo™ Plus Water Cartridge (Figure 8)

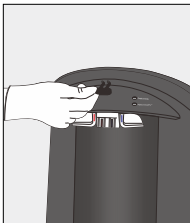


Figure 5

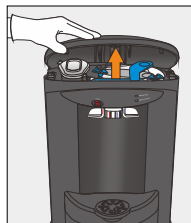


Figure 6

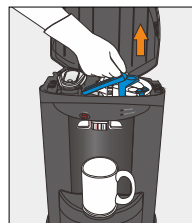


Figure 7

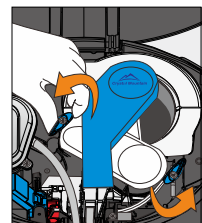


Figure 8

8. Pull SmartFlo™ Plus Water Cartridge upwards to remove (Figure 9)
9. Discard used SmartFlo™ Plus Water Cartridge according to local regulations. (Please recycle)
To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the reuse of sustainable resources.

Note: To reset the life timer system, the SmartFlo™ Plus is required to be removed from the dispenser for a minimum of 15 seconds while the unit is connected to the mains power supply.

10. Insert water line of replacement SmartFlo™ Plus Water Cartridge through the guide tube, and push through to bottle installation area (Figure 10).

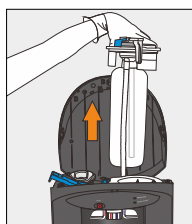


Figure 9

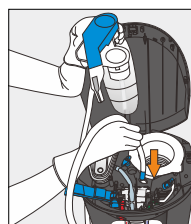


Figure 10

11. Ensure seal is properly installed on the outlet tube of the SmartFlo™ Plus Water Cartridge assembly (may have shifted during shipment or un-packaging)
12. Align SmartFlo™ Plus Water Cartridge with openings in cooler, and push into place
13. Rotate turn knobs to lock SmartFlo™ Plus Water Cartridge in place (Figure 11)
14. Close the locking clip to secure water outlet tubing in place (Figure 12)
15. Close the top cover of the cooler (Figure 13) (push downwards to lock into place)

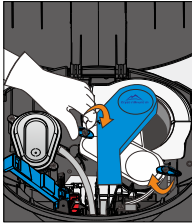


Figure 11

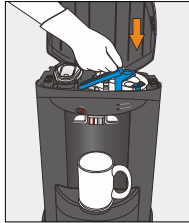


Figure 12

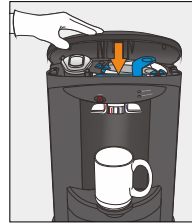


Figure 13

16. Place fresh bottle outside of the cabinet
 17. Clean the outside of new bottle with a cloth
 18. Remove bottle cap completely from the top of the bottle
 19. Remove replacement bottle adaptor from packaging and install onto new, full bottle (Figure 14)
- Note: to maintain sanitization of the system, refrain from touching the section of the bottle adaptor tube that is inserted into the bottle**
20. Remove protective cap from the SmartFlo™ Plus water line and install onto the replacement bottle adaptor assembly (Figure 15)

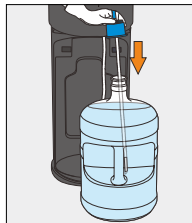


Figure 14

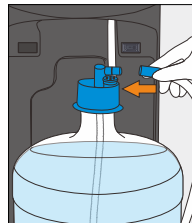


Figure 15

21. Slide water bottle into the cabinet and close the bottle compartment door (Figure 16 to Figure 18). The system will start to automatically prime (fill) the water system. (this will take approximately 90 seconds). You will hear the SmartFlo™ Plus water pump running at this time. If you do not hear the SmartFlo™ Plus pump running, confirm that the unit is plugged into an active power supply or contact your supplier.

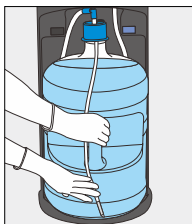


Figure 16

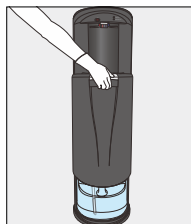


Figure 17

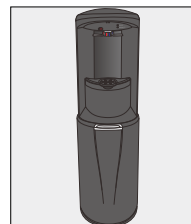


Figure 18

CAUTION! ALWAYS DRAIN WATER COMPLETELY BEFORE SHIPPING OR STORING THE COOLER!

Warning

- This product dispenses water at very high temperatures. Failure to use properly can cause personal injury.
- This dispenser is intended for dispensing water only. Do NOT use other liquids. Never use any other liquid in the dispenser other than known and microbiologically safe bottle water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use with caution only

The customer acknowledges that water, like other liquids, can cause damage to surfaces. The customer takes full responsibility for placing the cooler within a residence or business, and acknowledges that failure to address drips, leaks or spillages is at the customer's risk.

The Warranty and Underwriters' Laboratory for the coolers are invalidated if any alteration, modification, or use or misuse in combination with any other machine or devices is deemed to be the source of any claim. The manufacturer accepts no liability (including for bodily injury) resulting from any alteration, misuse, neglect, accidents, improper installations or repairs.

For more information on this product, please visit www.crystalcoolers.com